

In the menu mode, use "PREVIOUS" or "NEXT" to select menu item, press "PLAY" to confirm the selection. In Chinese OSD state, please following the red OSD menu item, choose "ENGLISH & EUR", the menu OSD will return to English OSD state in three steps.

STEP 1: goto menu item "设置", press "PLAY" to confirm

STEP 2: goto menu item "语言选择", press "PLAY" to confirm;

STEP 3: goto menu item "ENGLISH&EUR", press "PLAY" to confirm.

音乐 语言 调频 删除 设置 关于 编程播放  
↓  
音效设置  
播放模式  
对比度  
背光设置  
关机设定  
录音设置  
语言选择→ENGLISH&EUR  
返回